



Fleximax SRL

ACCESORIOS HIDRÁULICOS

ABRAZADERAS

| | |
|--------|-----------------------------------|
| ABAL6 | Abrazadera Alambre 11-13..... |
| ABAL7 | Abrazadera Alambre 12-14..... |
| ABAL8 | Abrazadera Alambre 13-15..... |
| ABAL9 | Abrazadera Alambre 14-17..... |
| ABAL10 | Abrazadera Alambre 15-19..... |
| ABAL11 | Abrazadera Alambre 17-21..... |
| ABAL12 | Abrazadera Alambre 19-23..... |
| ABAL13 | Abrazadera Alambre 20-24..... |
| ABAL14 | Abrazadera Alambre 22-27..... |
| ABAL15 | Abrazadera Alambre 25-31..... |
| ABAL16 | Abrazadera Alambre 29-35..... |
| ABAL17 | Abrazadera Alambre 32-38..... |
| ABAL18 | Abrazadera Alambre 36-43..... |
| ABAL19 | Abrazadera Alambre 41-47..... |
| ABAL20 | Abrazadera Alambre 45-52..... |
| ABAL21 | Abrazadera Alambre 47-55..... |
| ABAL22 | Abrazadera Alambre 49-58..... |
| ABAL23 | Abrazadera Alambre 57-66..... |
| ABAL24 | Abrazadera Alambre 61-69..... |
| ABAL25 | Abrazadera Alambre 66-74..... |
| ABAL26 | Abrazadera Alambre 69-77..... |
| ABAM16 | Abrazadera Americana 106-129..... |
| ABAM17 | Abrazadera Americana 116-140..... |
| ABAM18 | Abrazadera Americana 125-149..... |
| ABAM2 | Abrazadera Americana 13-29..... |
| ABAM19 | Abrazadera Americana 134-158..... |
| ABAM3 | Abrazadera Americana 14-36..... |
| ABAM20 | Abrazadera Americana 144-167..... |
| ABAM1 | Abrazadera Americana 15-26..... |
| ABAM21 | Abrazadera Americana 154-179..... |
| ABAM22 | Abrazadera Americana 163-188..... |
| ABAM23 | Abrazadera Americana 174-197..... |
| ABAM24 | Abrazadera Americana 182-205..... |
| ABAM4 | Abrazadera Americana 21-42..... |
| ABAM5 | Abrazadera Americana 26-49..... |
| ABAM6 | Abrazadera Americana 32-55..... |
| ABAM7 | Abrazadera Americana 40-63..... |
| ABAM8 | Abrazadera Americana 45-68..... |
| ABAM9 | Abrazadera Americana 53-77..... |
| ABAM10 | Abrazadera Americana 59-81..... |
| ABAM11 | Abrazadera Americana 65-88..... |
| ABAM12 | Abrazadera Americana 72-94..... |
| ABAM13 | Abrazadera Americana 78-101..... |
| ABAM14 | Abrazadera Americana 88-111..... |
| ABAM00 | Abrazadera Americana 9-13..... |
| ABAM0 | Abrazadera Americana 9-20..... |
| ABAM15 | Abrazadera Americana 98-119..... |



ABRAZADERAS

| | |
|---------|---------------------------------------|
| ABSP113 | Abrazadera Super presion 100-111..... |
| ABSP114 | Abrazadera Super presion 108-119..... |
| ABSP115 | Abrazadera Super presion 116-128..... |
| ABSP116 | Abrazadera Super presion 125-136..... |
| ABSP117 | Abrazadera Super presion 135-145..... |
| ABSP118 | Abrazadera Super presion 143-153..... |
| ABSP119 | Abrazadera Super presion 151-161..... |
| ABSP120 | Abrazadera Super presion 159-169..... |
| ABSP121 | Abrazadera Super presion 167-177..... |
| ABSP122 | Abrazadera Super presion 175-185..... |
| ABSP101 | Abrazadera Super presion 25-30..... |
| ABSP102 | Abrazadera Super presion 28-34..... |
| ABSP103 | Abrazadera Super presion 33-39..... |
| ABSP104 | Abrazadera Super presion 37-46..... |
| ABSP105 | Abrazadera Super presion 44-53..... |
| ABSP106 | Abrazadera Super presion 50-59..... |
| ABSP107 | Abrazadera Super presion 55-64..... |
| ABSP108 | Abrazadera Super presion 61-71..... |
| ABSP109 | Abrazadera Super presion 68-78..... |
| ABSP110 | Abrazadera Super presion 76-87..... |
| ABSP111 | Abrazadera Super presion 85-95..... |
| ABSP112 | Abrazadera Super presion 93-103..... |